

BROTHER HL-2300 SERIES DR2325 DRUM CARTRIDGE REMANUFACTURING INSTRUCTIONS

RESETTING THE DRUM COUNTER

There are several machine groups, and each has a different reset procedure. The groups are determined by the display-type. Each group is listed below..

HL-L2300D, HL-L2320D, HL-L2321D:

1. Open the front cover
2. Press and hold "GO" for about four seconds until all the LEDs light up Once all 4 LEDs are lit, release "GO"
3. Close the front cover of the machine
4. Make sure the drum LED is now off

HL-L2305W, HL-L2340DW, HL-L2360DN, HL-L2360DW, HL-L2361DN, HL-L2365DW, HL-L2366DW:

1. Open the front cover
2. Press and hold "OK" for about two seconds to display the "DRUM UNIT" option, and then press "OK"
3. Press the "UP ARROW" key for "RESET" to reset the drum counter
4. Close the front cover

DCP-L2500D, DCP-L2520D, DCP-L2520DW, DCP-L2540DN, DCP-L2540DW, DCP-L2541DW, MFC-L2700D, MFC-L2700DW, FC-L2701D, MFC-L2701DW, MFC-2703DW:

1. Open the front cover
2. Press and hold "OK" for about two seconds to display "REPLACE DRUM?"
3. For DCP Models, press the "UP ARROW" key for "RESET" to reset the drum counter For MFC Models, press "1" to reset the drum counter
4. Close the front cover

HL-L2380DW, DCP-L2560DW, MFC-L2720DW, MFC-L2740DW:

1. If the front cover is still open, close it
Press the RED "X" to interrupt the error
2. Press "SETTINGS"
3. Press "ALL SETTINGS"
4. Press the "DOWN ARROW" to display "MACHINE INFO"
Press "MACHINE INFO"
5. Press the "DOWN ARROW" to display "PARTS LIFE"
Press "PARTS LIFE"
6. Press and hold "#" until the LCD message changes
7. Press "DRUM"
8. Press "YES"
9. Press "HOME"