

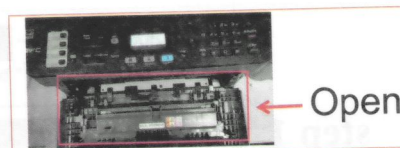
LASER TONER CARTRIDGE INSTRUCTION

Toner Counter Reset for Brother TN760/2420 Series

TN 2450

Thank you for purchasing our toner cartridge!

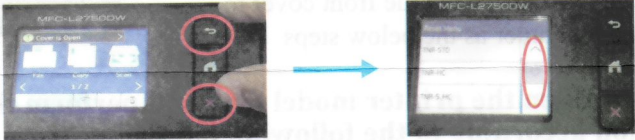
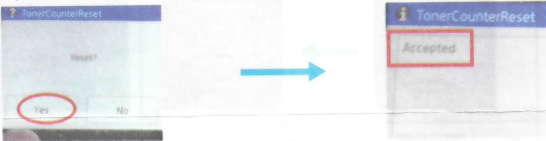
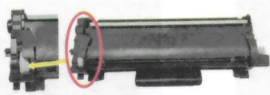
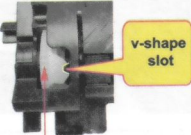
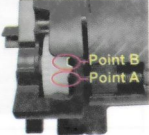
After a new cartridge is installed, if the printer displays "Cartridge Error", please reinstall the toner cartridge, close the front cover, wait for 8-10 seconds, and then open the front cover to reset the toner counter as the below steps.



* Please confirm the printer model first and perform the corresponding operation according to the following table.

Line LCD Models	1-Line LCD	2-Line LCD
	For example (Brother HL-L2350DW/HL-L2370DW/ HL-L2370DWXL/HL-L2375DW)	For example (Brother DCP-L2550DW/HL-L2390DW/ MFC-L2710DW/2690DW/DCP-L2510D/ DCP-L2530DW)
step 1	Press the " " and " " buttons 1 to 2 seconds at the same time. After releasing the hand, press the " " button again at once, and the printer screen display TNR-STR.	Press the " " and " " buttons 1 to 2 seconds at the same time. After releasing the hand, press the " " button again at once, and the printer screen display "Reset Menu K.TNR-STR".
	 → 	 → 
step 2	Press " " to select "TNR-HC" and then press " ", the printer displays the ▼ Reset ▲ Exit interface.	The "Reset Menu" appears. Press " " to select "K. TNR-HC" and then press " " the printer displays the ▼ Reset ▲ Exit interface.
	 → 	 → 
step 3	Press " " choose Reset, and please close the front cover after the screen display "Accepted".	Press " " choose Reset, and please close the front cover after the screen display "Accepted".
	 → 	 → 

LASER TONER CARTRIDGE INSTRUCTION

Touchscreen Modes	For example (Brother HL-L2395DW/MFC-2750DW/MFC-12750DWXL/MFC-L2730DW)
step 1	Press the “” and “” buttons 1 to 2 seconds at the same time . After releasing the hand , press the “” button again at once. And the “ Reset Menu ” appears. 
step 2	Select “ TNR-HC ” by clicking the screen  /  , and then click the “ TNR-HC ”, the printer display the TonerCounterResrt interface. 
step 3	Click “ Yes ”, and please close the front cover after the screen display “ Accepted”. 
If your printer displays “Cartridge Error” after cartridge installation:	
1  Locate the white gear on your toner cartridge.	2  3  Use your finger or a tool to rotate the white gear in the direction of the red arrow until the v-shape slot moves from Point A to Point B. Reinstall the cartridges and start printing.